


# SCOTTY Communication Platform SCP Quick Reference

## Status LEDs

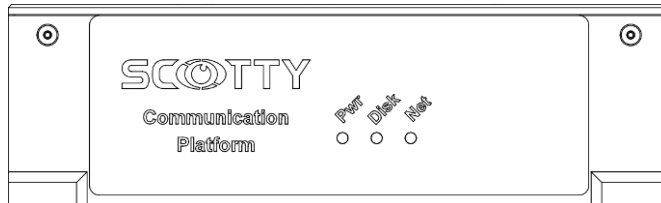

**Pwr** Power LED: indicates the power on state of the system.

**Disk** Disk LED: irregular flashing indicates internal solid state disk activity.

**Net** Network LED: indicates LAN activity.

**Disk** and **LAN** LED, two short flashes repeated once a second: the system temperature violates the operational limits.

## Controls

The SCOTTY logo on the top of the unit can be used as power button.

## Starting the System

Auto start: the system starts automatically when power is applied.

Manual start: push power button to start the unit.

## Turning off the System

Shut down: use the Windows start menu or push the power button.

Immediate power off: hold the power button for more than four seconds. Warning: This will not shut down Windows, data loss can occur.

For details, please refer to the **Equipment Manual SCP**, displayed with **Help | Open Manual**. Help files are available on the system under **Manuals** and on **www.scottgroup.com**.