


SCOTTY BlueBox Quick Reference

Status LEDs

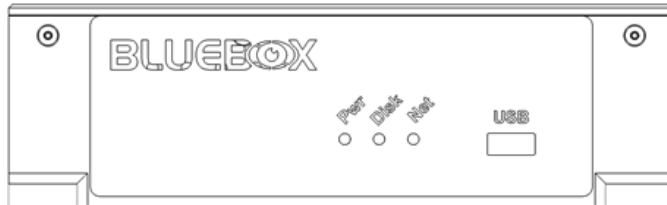

Pwr Power LED: indicates the power on state of the system.

Disk Disk LED: irregular flashing indicates internal solid state disk activity.

Net Network LED: indicates LAN activity.

Disk and **LAN** LED, two short flashes repeated once a second: the system temperature violates the operational limits.

Controls

The SCOTTY logo on the top of the unit can be used as power button.

Starting the System

Auto start: the system starts automatically when power is applied.

Manual start: push power button to start the unit.

Turning off the System

Shut down: use the Windows start menu or push the power button.

Immediate power off: hold the power button for more than four seconds. Warning: This will not shut down Windows, data loss can occur.

For details, please refer to the **Equipment Manual BlueBox**, displayed with **Help | Open Manual**. Help files are available on the system under **Manuels** and on www.scottysgroup.com.