

SCOTTY ProMin HD Quick Reference



Status LEDs

- Pwr** Power LED: Indicates the power on state of the system.
- Disk** Disk LED: Irregular flashing indicates internal solid state disk activity.
- Net** Network LED: Indicates LAN activity.

Disk and **LAN** LED, two short flashes repeated once a second: The system temperature violates the operational limits.

Controls

- Pwr** Power button to start and shut down the system

Starting the System

Auto start: The system starts automatically when power is applied.

Manual start: Push power button to start the unit.

Turning off the System

Shut down: Use the Windows start menu or push the power button.

Immediate power off: Hold the power button for more than four seconds. Warning: This will not shut down Windows, data loss can occur.

For details, please refer to the **Equipment Manual ProMin HD**, displayed with **Help | Open Manual**. Help files are available on the system under **Manuals** and on www.scottygroup.com.